

# Assembly Instructions

**MODEL#** CO-CA-3050-LGT/DRK/BRU/CNT-BSE

CO-CA-3050-LGT/DRK/BRU/CNT-TOP

Thank you for purchasing this quality product. Carefully check all packing material for small parts which may have come loose inside the carton during shipment. Keep all hardware out of the reach of small children. Study all the instructions and drawings carefully before assembly. Check that all connections are tight and the product does not wobble before using.



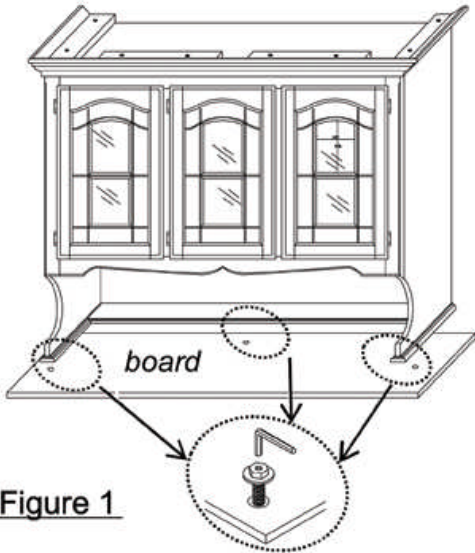


Figure 1

One board was secured to the bottom of Hutch with three bolts and three flat washers for the shipping safety purpose only. Please disassemble the board by using the Allen key and throw away the board. (Figure 1.)

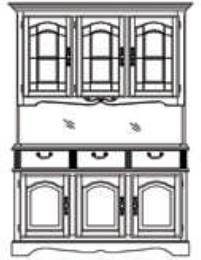


1. Carefully place the hutch onto the buffet.
2. Adjust the directions of the lock plates so that the holes are aligned with the drilled holes on the back of the hutch.
3. Secure the two lock plates with the attached screws.
4. Insert the shelf supports into the hutch and buffet to hold the glass and wood shelves properly.
5. Check that all parts are tight before using.

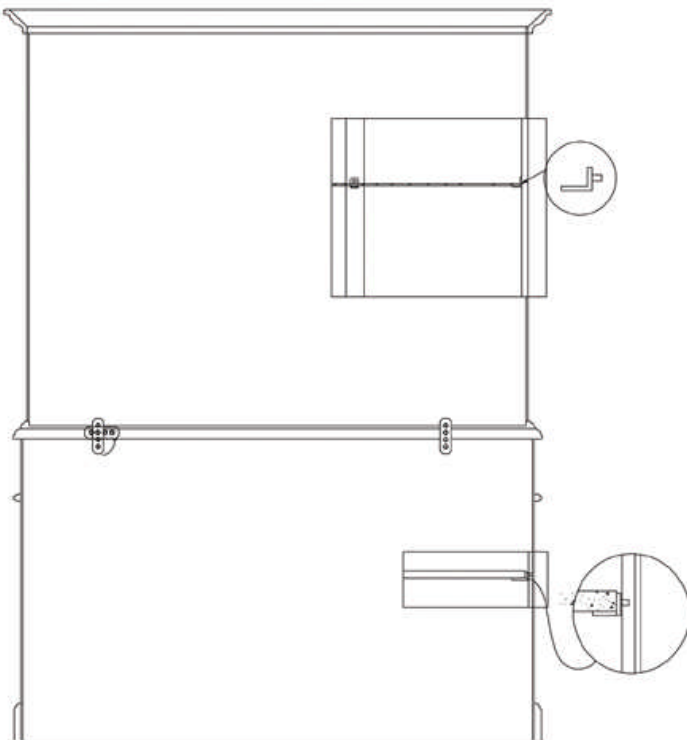

## PARTS CHECK LIST

ITEM	PART NAME	QTY
A	GLASS SHELF (HUTCH)	1
B	WOOD SHELF (BUFFET)	1

## HARDWARE CHECK LIST

ITEM	PART NAME	QTY
C	SCREW 	6
D	SHELF SUPPORT 	8
E	ALLEN KEY 	1