


ASSEMBLY INSTRUCTION


DESCRIPTION: BENCH BACKLESS DINING w/WOOD SEAT ITEM NO: SL-CH-5815G-BCO-RTA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.


	Q'TY	
А	Bench Top	1PC
В	Center legs	2PCS
С	Right legs	2PCS
D	Left legs	2PCS
Е	Center Stretcher	1PC
F	Side Strecher	2PCS
G	Front Strecher	1PC


HARDWARE LIST:							
No.	Description	Sketch	Size	Quantity			
1	Bolt	0	1/4"*60 mm	12 Pcs			
2	Lock Washer	ම	1/4"	12 Pcs			
3	Flat Washer		1/4"*19mm	12 Pcs			
4	Allen Key	7	4mm	1 Pc			
5	Screw	*************	4*40mm	9 Pcs			

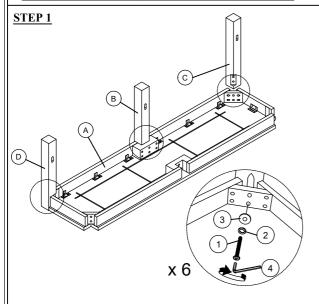

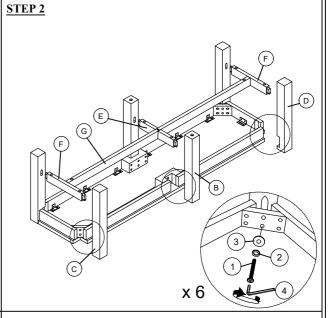

STEP 3

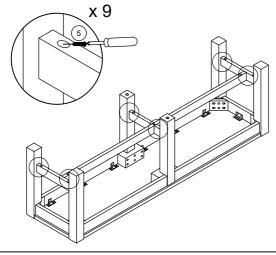

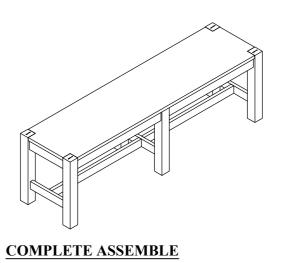

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.