


Assembly Instructions

MODEL: CO-BS-1110 -BRU-K24

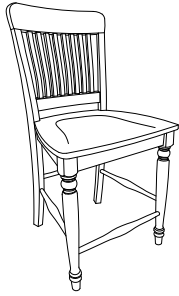

Thank you for purchasing this quality product. Carefully check all packing material for small parts which may have come loose inside the carton during shipment. Keep all hardware out of the reach of children. Study all of the instructions and drawings carefully before assembly. Check that all of the connections are tight and the product does not wobble before using.

NOTE:
HARDWARE QUANTITY IS FOR ONE CHAIR.

PARTS CHECK LIST	
Q'TY	PART NAME
1	Chair Back
2	Front Leg
1	Left Side Stretcher
1	Right Side Stretcher
1	Front Stretcher
1	Seat

HARDWARE CHECK LIST	
Q'TY	PART NAME
4	Bolt (A)
4	Bolt (B)
2	Bolt (C)
10	Flat Washer (D)
10	Lock Washer (E)
10	Screw (F)
1	Wrench (G)
1	Glue (H)

Step 1. Attach the seat frame to the chair back by using two bolts (C), two flat washers (D) & two lock washers (E). Do not tighten the bolts at this moment.


Step 2. Secure the seat frame to the rear chair legs by using four bolts (A), four flat washers (D) & four lock washers (E). Do not tighten the bolts at this moment.

Step 3. Insert the two side stretchers into both the two rear legs and the two front legs using the enclosed glue (H). Insert the front stretcher between the two front legs using the enclosed glue (H). Carefully attach the two front legs to the seat frame by using four bolt (B), four flat washers (D) & four lock washers (E). Make sure the pre-drilled holes on all stretchers face to the floor.

Step 4. Attach the seat to the seat frame with four screws (F) provided.

Step 5. Tighten all bolts firmly with the wrench (G) provided.

Step 6. Secure the front stretcher and the two side stretchers to the chair legs by using six screws (F) provided through the pre-drilled holes.

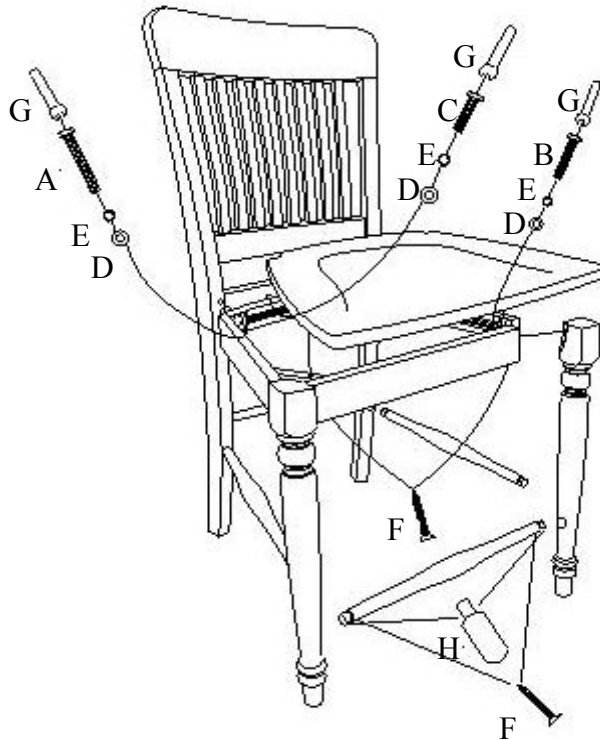

*** Make sure that all of the connections are tight and the products does not wobble before using.**