


ASSEMBLY INSTRUCTION

Item No : TU-BR-5285QS-VOK-FB & RS

Description : QUEEN STORAGE FOOTBOARD & SIDE RAIL

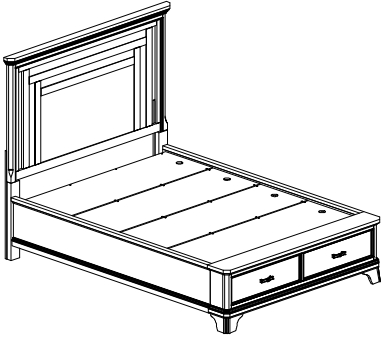

IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

HEADBOARD & FOOTBOARD


PART LIST		
NO	DESCRIPTION	QTY/PCS
1	HEADBOARD	1 PC
2	FOOTBOARD	1 PC
3	FOOTBOARD LEG	3 PCS
4	CONCEAL PANEL BOARD	4 PCS

HARDWARE LIST		
NO	DESCRIPTION	QTY/PCS
A	JCBB SCREW M8 x 25	8 PCS
B	JCBB SCREW M8 x 40	2 PCS
C	SPRING WASHER M8	10 PCS
D	FLAT WASHER M8	10 PCS
E	ALLEN KEY M5	1 PC
F	CSK SCREW M4 x 32	10 PCS
G	CSK SCREW M4 x 20	32 PCS

SIDE RAIL

PART LIST		
NO	DESCRIPTION	QTY/PCS
5	SIDE RAIL	2 PCS
6	SLAT	5 PCS
7	CENTER LEG	5 PCS



NOTE : YOU WILL ALSO NEED A PHILIP SCREW DRIVER (NOT PROVIDED)

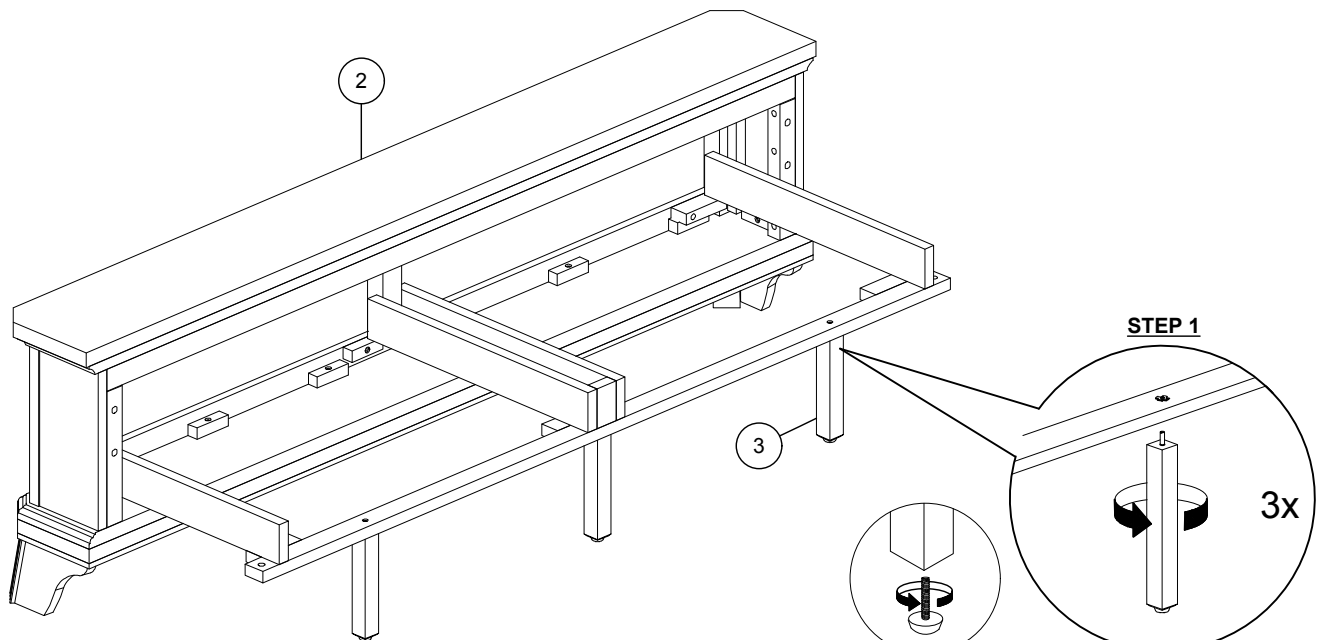

ASSEMBLY INSTRUCTION

Item No : TU-BR-5285QS-VOK-FB & RS

Description : QUEEN STORAGE FOOTBOARD & SIDE RAIL

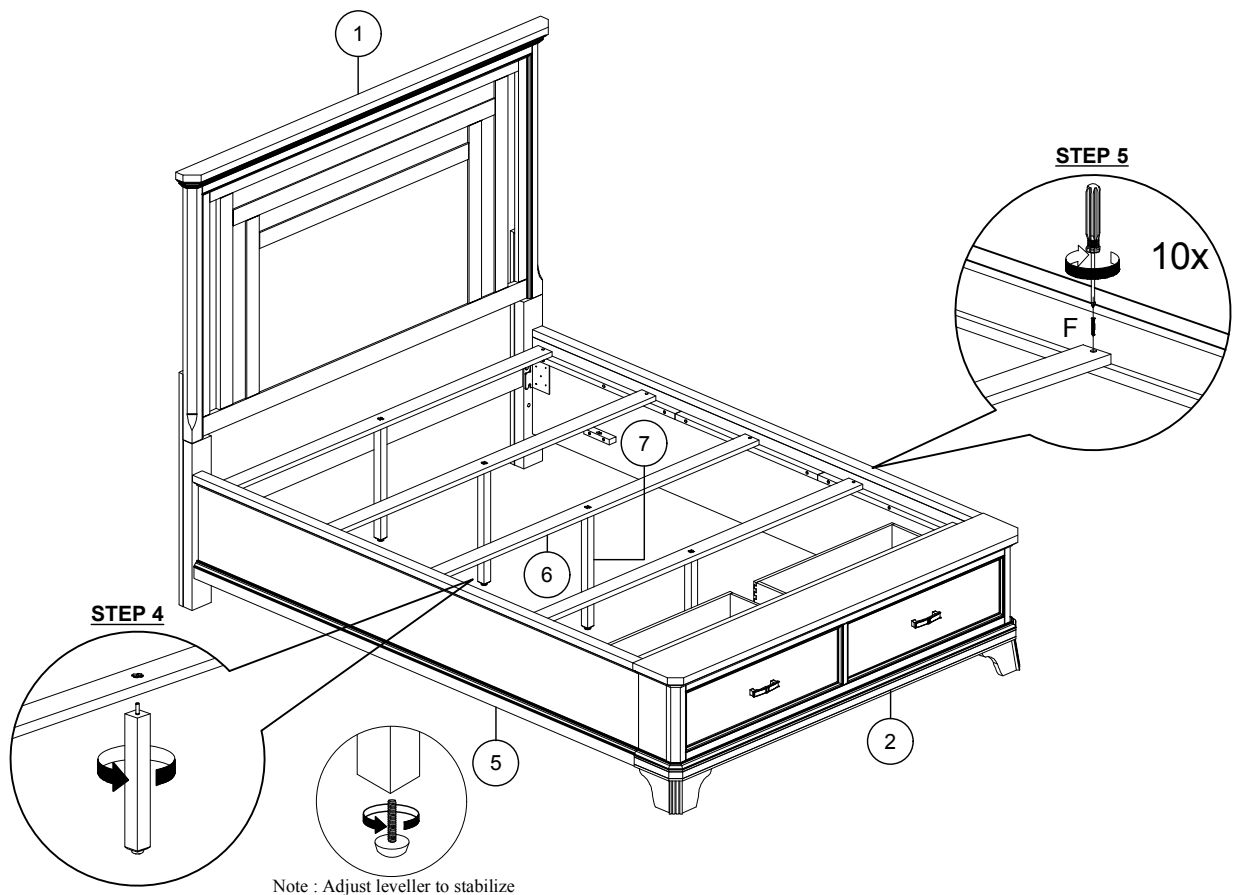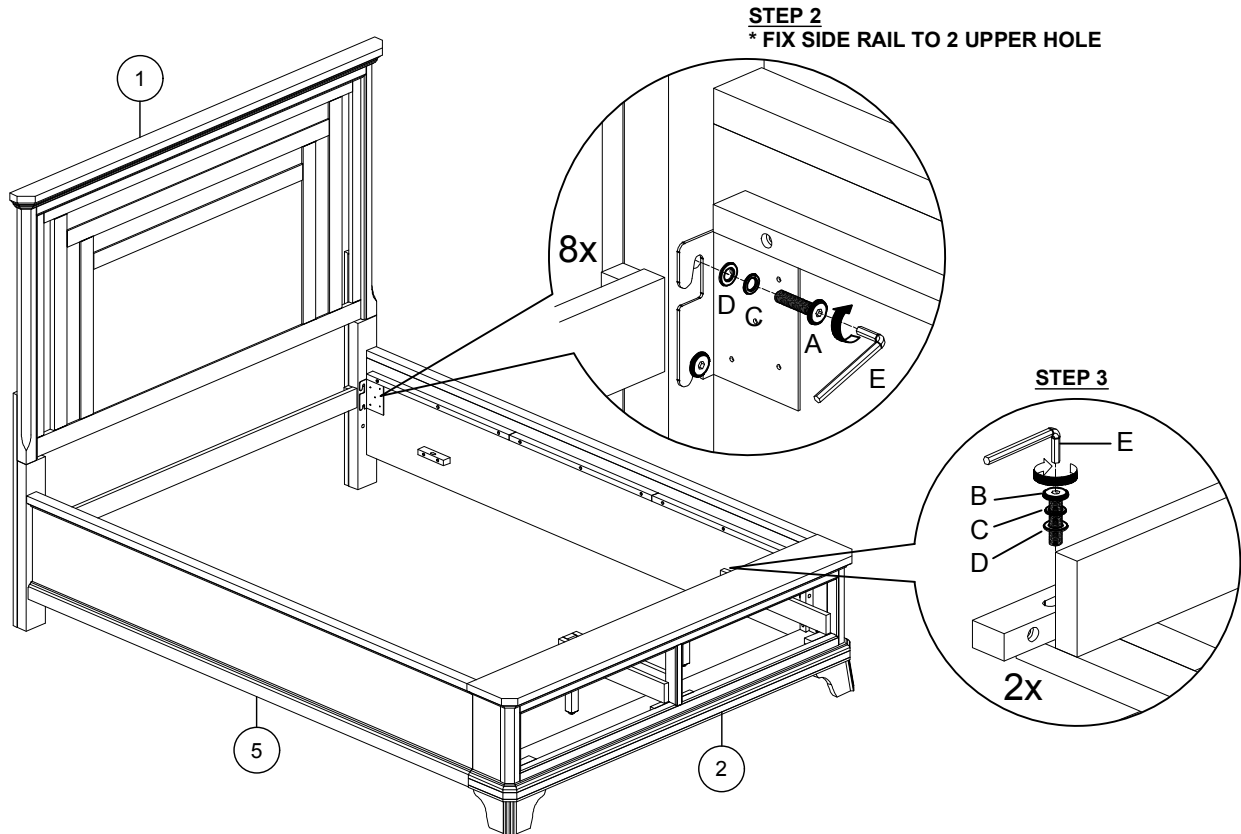

ASSEMBLY INSTRUCTION





Item No : TU-BR-5285QS-VOK-FB & RS

Description : QUEEN STORAGE FOOTBOARD & SIDE RAIL

Align & place conceal panel board (4) on top of 2nd & 3rd bed slat (6).

Note : Conceal panel board (4) has to be seated in-between each of the bed slat (6) as per diagram shown.

Align and fasten conceal panel board (6) to bed slat (6) using screw (G) and fully tighten with Phillips head screw driver (NOT INCLUDED).

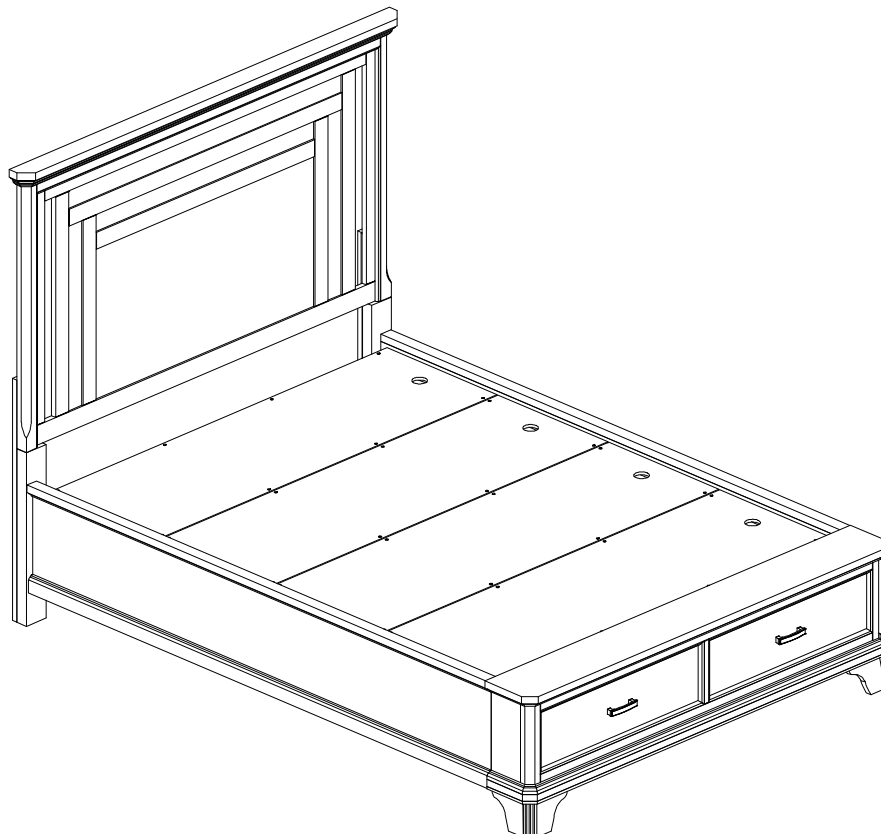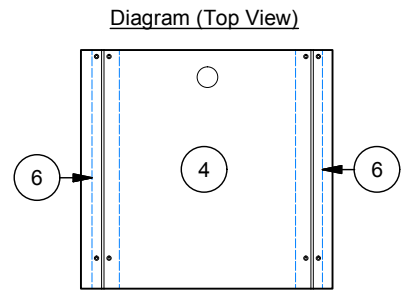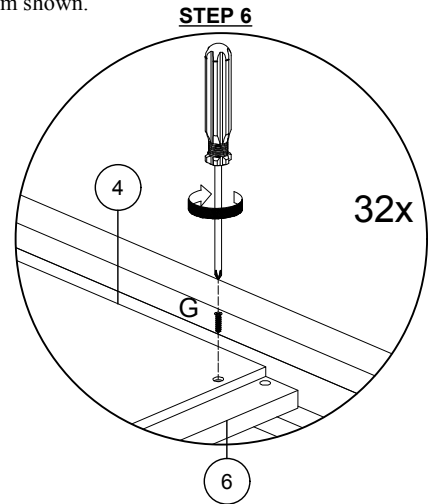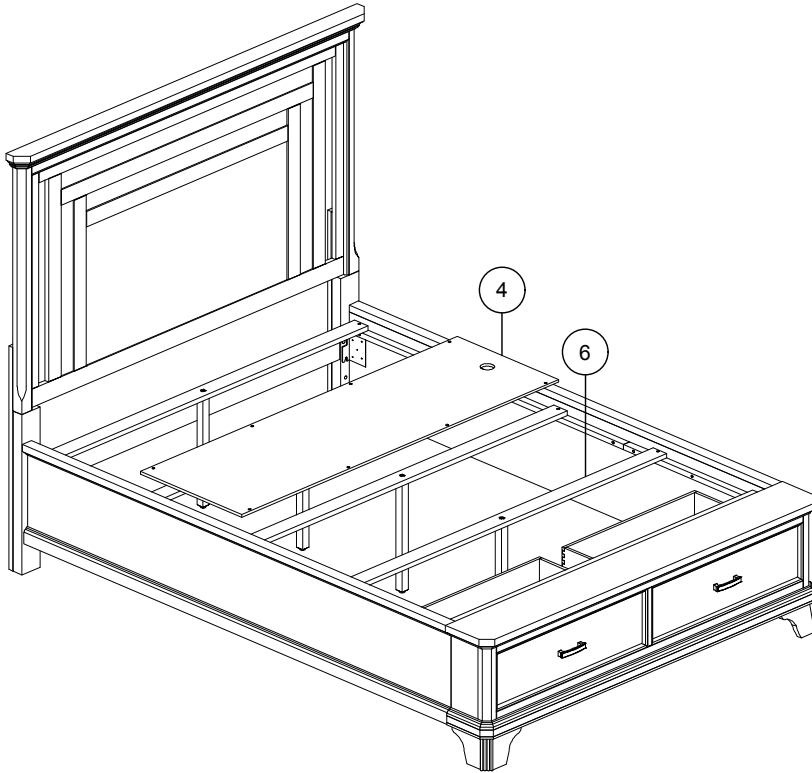

Complete Assembly

MADE IN MALAYSIA

3 OF 3